



Table of contents EN


Product description	2
Parts name	3
Introduction for wireless mode	4
How to charge the battery	4
How to apply the needle cartridge	5
Adjustment of needle length	6
Speed display and adjustment	6
How to use the inductive base	7
Needle cartridge introduction	8
Reference chart	9
Specification	9
Precaution	10
Warranty	11



The device consists of an electric microneedling pen, an inductive base and disposable needle cartridges. This manual will explain how to use each component in detail.

The device is used to improve the appearance of the skin and reduce signs of aging. It is intended to stimulate the skin with micro-needles for collagen and elastin production. The microchannels are created in the superficial skin by the device also help with the absorption of skin serums.

There are 7 different types of needle cartridges designed for the device. These cartridges can be used for micro-needling treatment and nano-needling treatment.

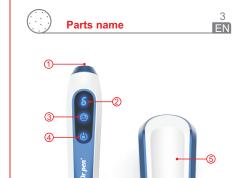

- 1 Power Interface
- ② Speed Display
- 3 Speed adjustment
- Power button Start/Pause button
- (5) Inductive base
- 6 Scale Point
- Scale Adjustment Ring
 8 Needle Cartridge



Introduction for wireless mode

This device is powered by a built-in battery. It can work

wirelessly. The power cable and the adapter are used to

How to charge the battery

Connect the power cable with adapter to the power interface

of device and plug the adapter into a live AC outlet to charge

The pen shows "

The pen show spinning " 👭

when charging is completed.

lease be sure to read the instructions before use and follow as described

Do not use it near the place with high temperature, dust or humidity (Near the humidifier). It may cause malfunction.

Do not repair, disassemble or alter the controller and the body. It may cause malfunction.

Do not use the stripped cord or propped cord. It may cause fires(Be sure to replace it with another).

No one other than the operator can touch it. It may cause accidents or malfunction.

ttention, consult accompanying documents

Alternating current

Date of manufacture

Direct current

===

Do not use the propped cord which has crack or scares. It may cause scares on the skin.

When you don't use it for a long time, unplug it from the outlet.

Be sure to have an inspection for test. If any troubles are found,

SN Serial No.

ш

i

Manufacturer

CE mark

Do not touch the device or detach the power cords with wet hands. It may cause electric shock.

Do not apply it to the person as following:

Do not apply it to the person as follow
1.Who has acute disease or bloody disease ov
2.Who has allergy and hemophilia
3.Who has melanosis of the face
4.Who has high internal heat
5.Who regularly visits hospital
6.Who takes medicines
7.Who is under 12 years old

Do not use it on the power other than AC 220V. It may cause fires or malfunction.

automatic shutdown.

while charging

The pen show "

restarting after the low battery

the device. Charging will complete in about 3 hours. The number of speed flashes slowly when the battery is

The pen will turn off automatically after the number of

speed flashes quickly for 1 minute.

charge the device when it is out of battery.



EN

How to apply the needle cartridge

 
11

EN

1. Take out needle cartridge from the sterilized packaging. (Fig1)



2. Find the "U" shape notch on the cartridge, align the notch with the dot on the bottom of the device, and slightly push the cartridge into the device. (Fig2)



- 3. Lock the needle cartridge to the device by turning it clockwise.
- 4. Turn the needle cartridge counterclockwise and pull it out when you would like to remove the cartridge.
- 5. Start the device only when the needle cartridge is assembled correctly. Press and hold the power button for 3 seconds to turn on/off the device.

Before assembling or disassembling the needle cartridge, make sure the U-shaped point of the needle cartridge is aligned with the point of the handpiece.

The needle cartridge is designed for single use.

Place the used needle cartridges in a trash container. If the needle cartridge is inadvertently contaminated during installation (i.e. Dropped on the floor, package opened/damaged.) ,please discard it and get a new needle cartridge.



User Manual A11 EN

Please read the manual before use

Adjust the depth of the needle by turning the scale adjustment ring. The depth of the needle should be adjusted after starting the pen. The scale number aligning with the scale point shows the current needle depth. (Fig3)



Speed Display











Press and hold the power button for 3 seconds to start or shut down the device. After starting the device, the speed changes once every time the power button is pressed.



How to use the inductive base



After the device is turned on. Short press the power button to start or pause the device.

The light of power button is constant on. Waiting state: The light of power button flashes continuously.

In the running state, the device will automatically stop working when it stays on the inductive base



In the running state, the device will automatically restart working after leaving the inductive base.



Needle cartridge introduction



Attention

The needle cartridge is disposable.

 
The needle cartridge is designed for Dr.pen A11 only.

Please sterilize the needle cartridge with 75% alcohol for a few minutes before use.

Please dispose the used needle cartridge to the trash



Reference chart



0.5 - 1.0

2.5



Cheek and Chin

Product name Auto-stamp Motorized Meso Machine

Model name: Dr.pen A11 Adapter

Input: 100-240V 50-60HZ Output: 5V == 1A Package Weight: 625 g

Package Size: 194*146*67 mm

Packing List

Item	Quantity
Hand Piece	1 pc
Adapter	1 pc
Manual	1 pc
Power Cable	1 pc
Needle Cartridge	2 pcs
Base inductive	1 pc

EN

Precaution



The warranty period of the device is 12 months. We

Warranty

offer repair service from the purchase date. If any of our products has damages or natural trouble, we provide replacements or repair service. The use of third-party cartridges can cause damage to the device. This could invalidate the warranty.

General maintenance

Make sure to inspect the device and adapter before use.

Ensure the device is turned off when not in use. Wipe its surface with a disinfecting wipe.

Pay attention to clean areas such as crevices, seams, and areas around where the needle cartridge attaches to the device.

Keep it away from direct sunlight or high temperature or humidity.

Do not leave the measurement, repair or alter of the device to non-professional staffs

When you use the device which has not been used for a long time, make sure to check if it works properly with safety.